



Fridge-freezer

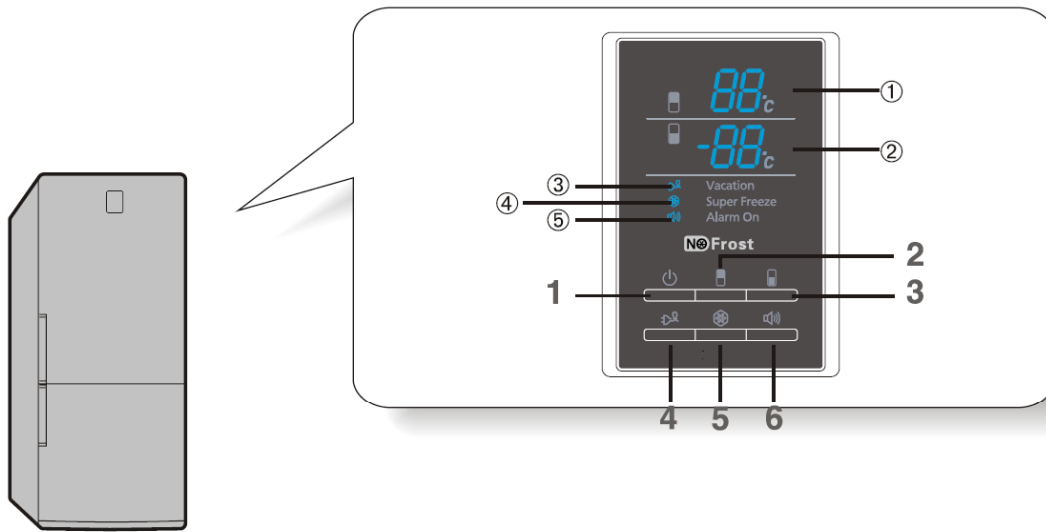

1. Operation Button

- If you want to turn off, keep pressing for 3 seconds.

 Do not disassemble the refrigerator with unit turned on.
- It may cause electric shocks or other damages.

2. Fridge temp Button


- To change the refrigerator temperature:
 - Press the REF.TEMP button.
 - The current setting temperature is displayed (①).
 - Press the REF.TEMP button one or more times until the required temperature is displayed (①).
 - When you complete the setting of refrigerator temperature, the refrigerator temperature display (①) flashes 5 times.The temperature changes in sequence. After +7°C, the display returns to +1°C
Refrigerator temperature range: +1°C to +7°C.

3. Freezer temp Button

- In the normal model, the temperature displayed (②) is the setting temperature of the freezer.
- To change the freezer temperature:
 - Press the FRE.TEMP button.
 - The current setting temperature is displayed (②).
 - Press the FRE.TEMP button one or more times until the required temperature is displayed (②).
- The temperature changes in sequence. After -25°C, the display returns to -14°C again.
- Freezer temperature range: -14°C to -25°C.


4. Vacation Button

- If you are going on a long vacation or business trip or you do not need to use the refrigerator, press the Vacation button.
- The refrigerator is switched off but the freezer remains on.
- The Vacation indicator (③) remains on while the Vacation function is operating.

 - You must empty the refrigerator before pressing the Vacation button (③).
CAUTION - There is no need to disconnect the refrigerator from the power supply if you will be away for less than three weeks. But remove all the food if you are going away for three weeks or more, unplug the refrigerator and clean, rinse and dry it.


5. Super Freeze Button

- Switch for the fast freeze function on or off.
- Use when you wish to freeze foods quickly.
- The Super Freeze indicator (④) remains on while the fast freeze function is running.
- While this function is selected, the refrigerating device remains switched on continuously and produces a very low temperature inside the freezer.
- The super freeze function switches off automatically. When the fast freeze process is completed, the Super Freeze indicator (④) switches off and the freezer switches back to the previous setting temperature.
- To release Super freezer function, press the button again.

 If you need to freeze large amount of food stuff, set the temperature of freezer compartment as the coldest temperature before you turn on the Super Freeze Button.

6. Alarm On Button

- When you press the Alarm on button, it's activated and displayed (⑤). Alarm will go off after a certain period of time when the refrigerator door is kept open.
- If you want to turn off the Alarm when it is set to Alarm On, press the button one more time to cancel the alarm.

-  • The freezer door does not have an alarm function to indicate that the door is open or closed.
If the Super Freeze, Vacation mode is already selected and you press one of the
- other buttons, the current mode is cancelled and the mode corresponding to the button pressed is selected.